

## **CANON GL2 - Digital Video Camcorder**

The Canon GL2 requires the use of the Lithium Ion Battery Pack (BP-915) 7.2V  
or  
The Canon Compact Power Adapter (CA-920)

### **ASPECT RATIO**

For Wide-Screen 16x9 Aspect Ratio - Press Menu button, Select Cam. Set Up, Select 16x9, Set it to ON, Exit Menu.

For Standard 4x3 Aspect Ratio - Press Menu button, Select Cam. Set Up, Select 16x9, Set it to OFF, Exit Menu.

### **AUDIO RECORDING & MONITORING**

Audio Recording Levels can be set to (A) Auto or (M) Manual.

Monitor Audio with Provided Stereo Headphones while Recording.

Audio Monitor Level is located on the back of the camera to the lower left.

Visually Confirm L&R Audio Recording Levels on Camera LCD Display - Menu, Cam. Set Up, Set Audio Level to ON, Exit Menu.

### **WHITE BALANCE**

The Camcorder's auto White Balance System compensates for a wide range of lighting conditions. Although slight variations are unavoidable, colors will appear natural in virtually every situation.

In some cases, you will get better results by setting the white balance yourself, or using the indoor or outdoor modes.

For Auto, Indoor, or Outdoor White Balance - Set the Program Selector to P, press the W.Balance Select Button, & Select Mode.

For Manual White Balance - Set Program Selector to P, Point the Camera @ a White Object(such as a sheet of paper) and zoom in until it fills the screen, Press the W.Balance Select Button, then Press the W.Balance set Button.