

DVD CAMCORDER INSTRUCTIONS


PLUG IN POWER CORD TO WALL

PLUG OTHER END OF POWER CORD INTO BACK OF DVDCAM "DC-IN"

SLIDE "OPEN" BUTTON ON TOP OF DVDCAM, WAIT FOR CAM TO OPEN

INSERT MINI-DVD AND PRESS IT DOWN, CLOSE DVDCAM DOOR

TURN ON DVDCAM, ROUND DIAL, TOP BACK OF DVDCAM

MAKE SURE FILM PICTURE  LIGHTS UP (IF NOT USE "MODE" BUTTON)

OPEN VIEWFINDER SCREEN, LEFT SIDE OF DVDCAM

PRESS "X" ON UPPER RIGHT OF SCREEN

REMOVE LENS CAP FROM DVDCAM LENS

SET ZOOM, "W" AND "T" ON TOP OF DVDCAM

TO RECORD: PRESS "START/STOP" BUTTON ON BACK OF DVDCAM

TO PAUSE OR STOP: PRESS SAME BUTTON

WHEN YOU ARE COMPLETELY FINISHED WITH A DISC, PRESS "P MENU"

ON THE LOWER RIGHT OF VIEWFINDER SCREEN

PRESS "FINALIZE" ON THE TOP RIGHT OF THE SCREEN, WAIT, REMOVE DISC

NOTE: YOU MAY PAUSE AND REMOVE THE DISC AT ANYTIME, YOU MAY RECORD

MORE THAN ONE STUDENT ON A DISC. THE DISC WILL ALWAYS PLAY IN

THE DVDCAM BUT TO GET THE DISC TO PLAY ON YOUR COMPUTER OR

DVD PLAYER YOU MUST **FINALIZE** THE DISC